

Ceramic Drinking Water Filter Candle

Preparing the Filter for use

These instructions cover a variety of filter candle grades, therefore, please ensure that you follow the relevant instructions for the grade of candle that you have purchased

Extreme cleanliness is important. Wash hands before handling the product and take care to ensure that no contamination of the components occurs during assembly

Installation

When installing a new filter candle it is important to condition the filter with the incoming water using the following procedure:

Pressure Filters

- Place the rubber O ring over the threaded mount
- Screw the candle into the housing, ensuring that a seal is made with the O ring. Do not over tighten
- Open the isolation valve/tap to allow water to flow through the filter to waste for 10 minutes
- Allow the filter to stand for 24 hours and then flush for a further 10 mins to waste

The filter is now ready for use

- For optimum performance, water flow should be restricted to the flow rate indicated in the table below

	Rated Service Flow for Optimum Performance	Filter Capacity
Ultracarb	0.5 USGPM/1.9 LPM	600 USG/2250 L
Super Sterasyl	Gravity Flow	533 USG/2000 L
Ultra Sterasyl	Gravity Flow	400 USG/1500 L
Sterasyl	1.3 USGPM/5 LPM	2600 USG/10,000 L

Gravity Filters

- Place the sealing washer over the threaded mount
- Place the filter candle mount stem through the hole in the upper section of the housing and secure with a wing nut. Do not over tighten
- Ensure that the outlet tap is in the off position
- Fill the upper container with cold water and allow this to filter through. Our filter is made of a special ceramic and contains carbon granules; this means black particles may be visible when water filters through for the first time. Discard the first filtered water.
- Repeat the process and run at least 1 litre of water to waste per fitted filter, and continue running until the water is clear. Wipe the lower chamber with a clean cloth to remove any dust particles

The filter is now ready for use

PLEASE NOTE IN BOTH CASES

- Super Sterasyl® and Ultra Sterasyl® candles contain carbon granules and black particles may be seen in the water that first runs to waste. This is normal and will clear as the water runs
- If the filter is left to stand for more than 3 days without use, it is recommended that one litre of water be allowed to run to waste before using

Operation

Due to filtration of particulate contaminants from the water during use, the flow of water from the filter may reduce over a period of time. To restore the water flow to its normal level, remove the filter and scrub the surface evenly with a clean abrasive kitchen pad under running water or in a bowl, ensuring that the open ended plastic mount is clear of the water, to avoid contamination

LEGAL DISCLAIMER.

In the absence of any negligence or other breach of duty by us, the installation and use of this product is entirely at your own risk. You must at all times observe and comply with our instructions (whether set out in the appliance manual or otherwise) relating to the installation and use of this product. We will not be liable nor responsible to you for any loss or damage, legal disputes or conflicts of interests and other adverse events you suffer as a result of your failure to observe or comply with our instructions or otherwise results from your misuse or irresponsible or negligent use of the product or as a result of any events outside of our control. To the maximum extent permitted by any applicable laws, we make no warranty, representation or guarantee (whether express, implied or otherwise) regarding the fitness, merchantability, or suitability of this product for any unreasonable or unforeseeable purpose. This disclaimer does not affect your statutory consumer rights or otherwise restrict or limit any liability that we cannot lawfully exclude under any applicable laws.

